

TENNEKER®


GRILL Ranger TC-2

 
 
 
 
 
 
- D** Grill | Gebrauchsanweisung
- F** Barbecue | Manuel de l'utilisateur
- I** Barbecue | Manuale dell'utente
- NL** Barbecue | Gebruiksaanwijzing
- S** Grill | Bruksanvisning
- CZ** Gril | Návod k použití
- SK** Gril | Návod na použitie
- RO** Grătar | Manual de utilizare



10617016




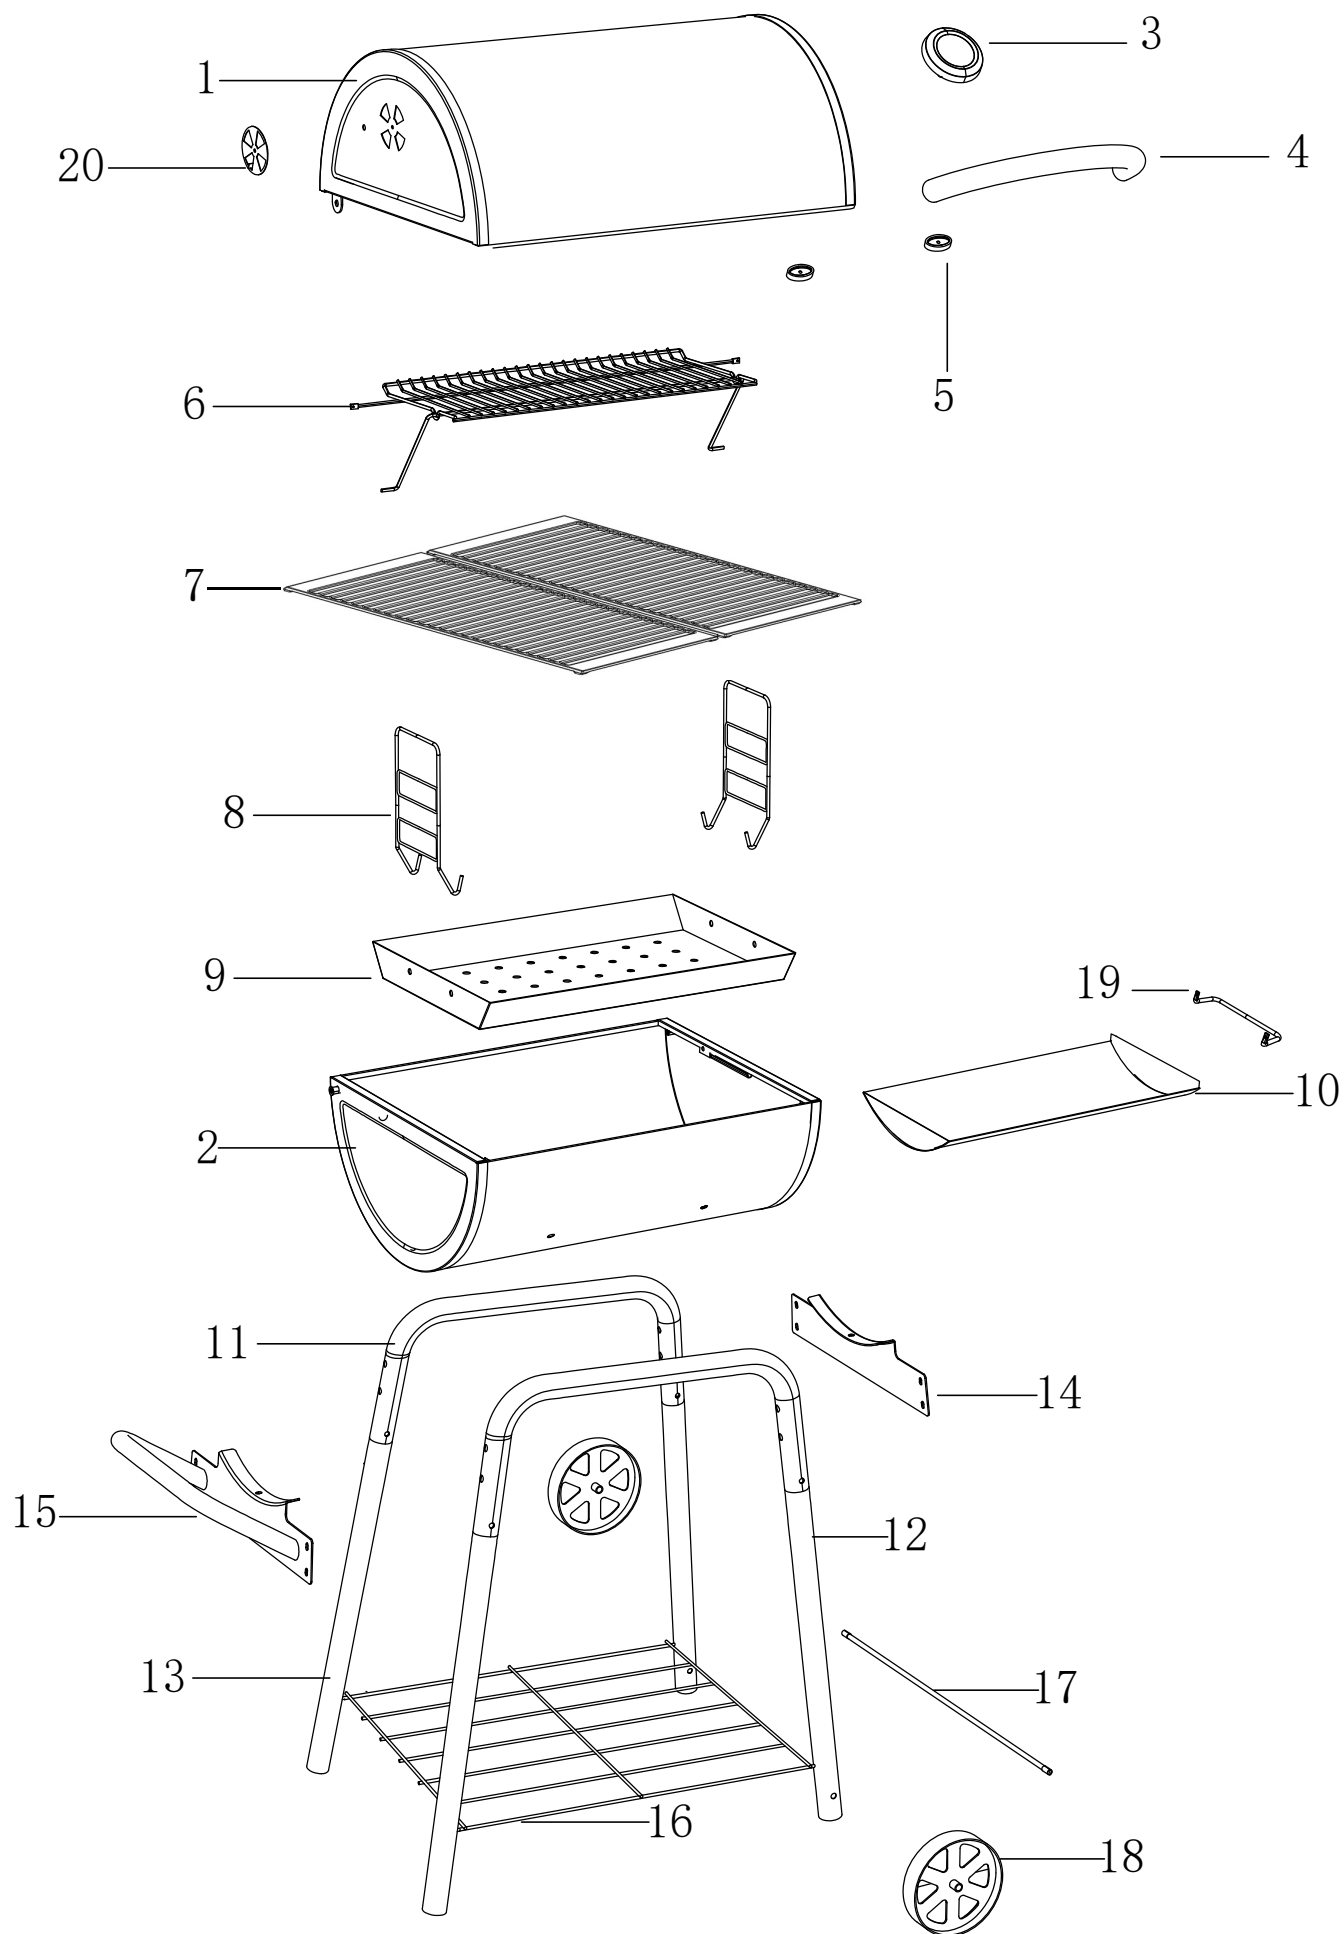


PART NO.	COMPONENT	QUANTITY	PART NO.	COMPONENT	QUANTITY
1		1	11		2
2		1	12		2
3		1	13		2
4		1	14		1
5		2	15		1
6		1	16		1
7		2	17		1
8		2	18		2
9		1	19		1
10		1	20		2

PART NO.	COMPONENT	DESCRIPTION	QUANTITY
A		M6X40	4
B		M6	10
C		M6X12	20
D		Ø13X Ø6	4
E		M6X15	2
F		M6	2
G		M8	2


11	2x		A	4x
12	2x		B	4x
13	2x			

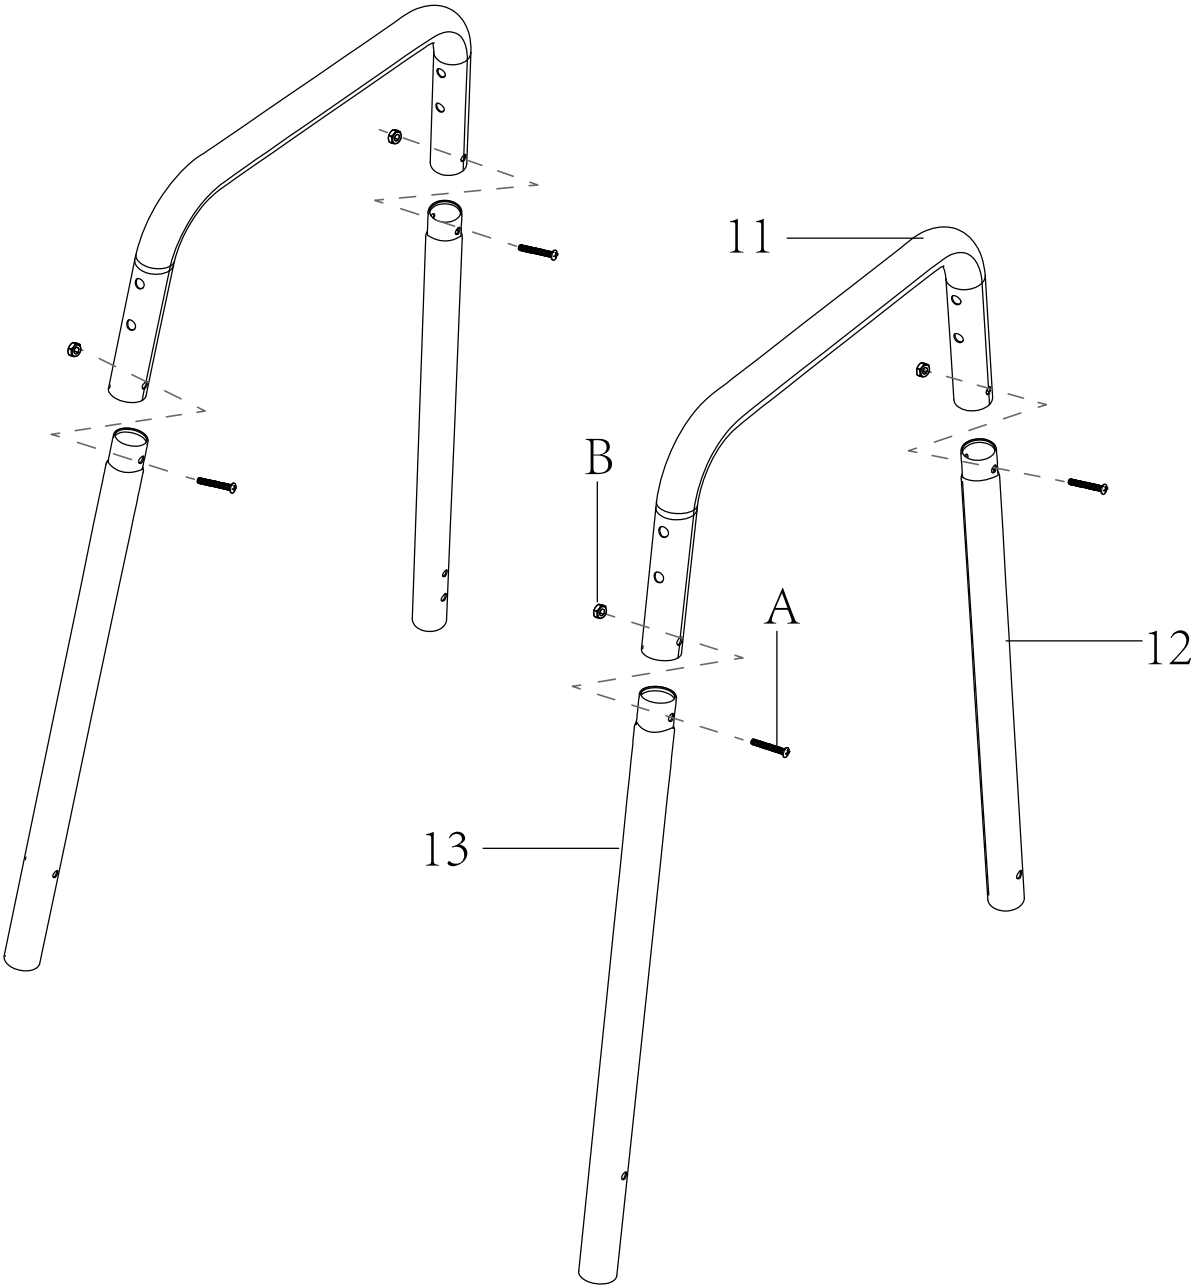


16	1x		18	2x
17	1x		G	2x

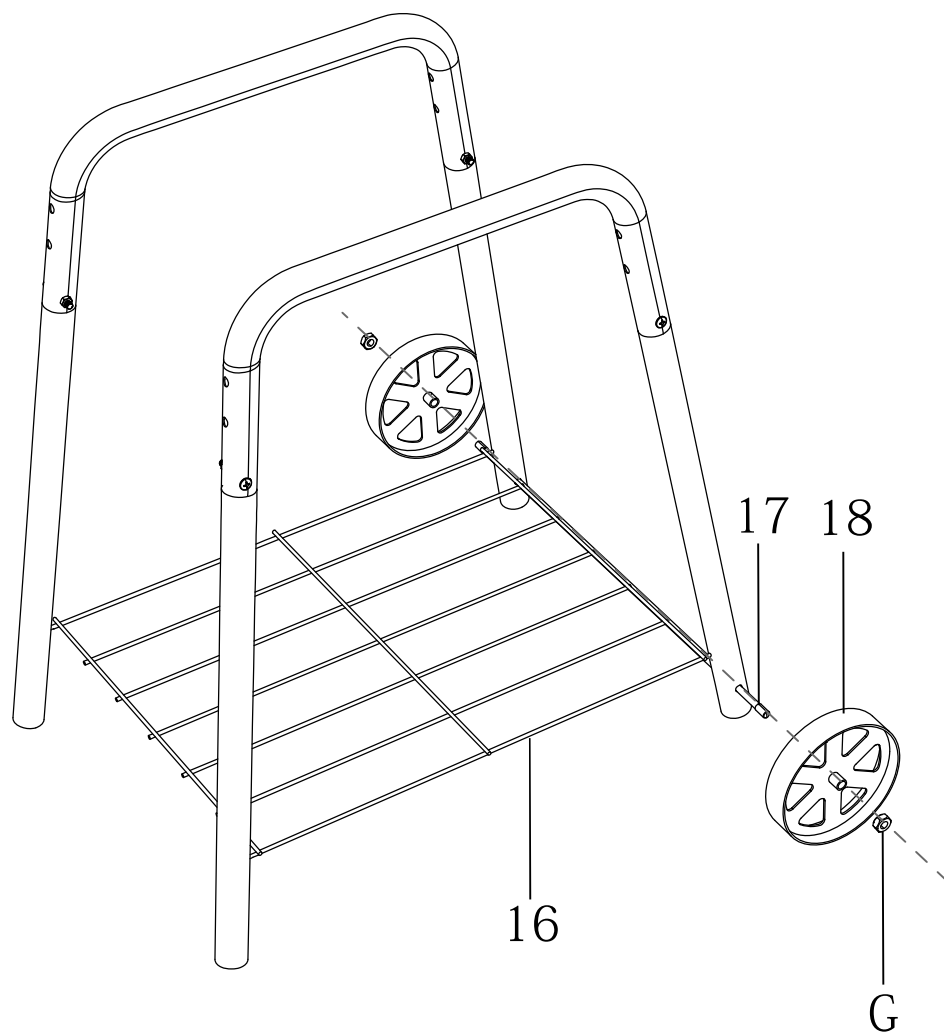


14	1x	C	8x
15	1x		

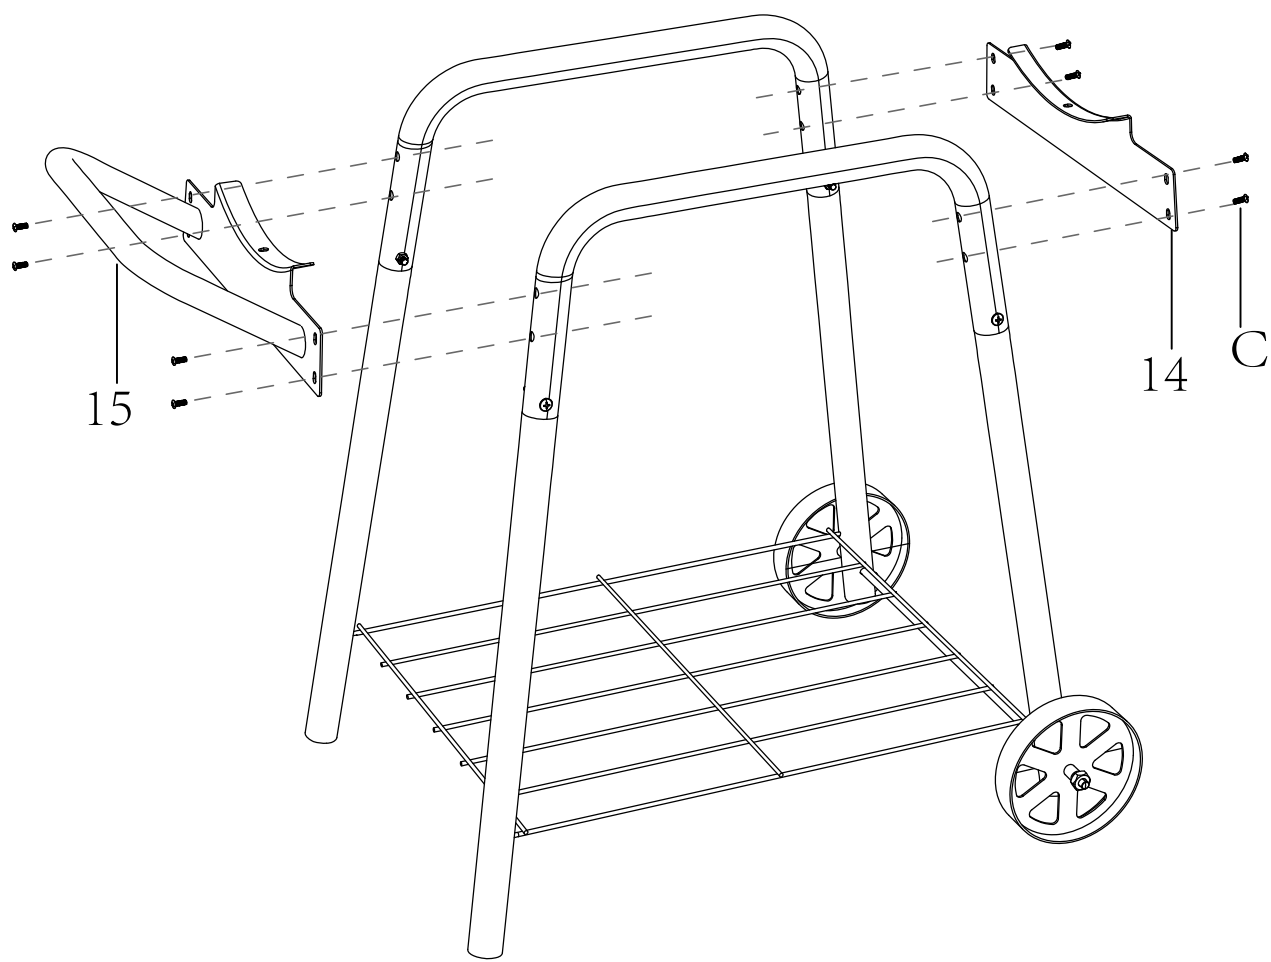


2	1x		B	2x
			C	6x

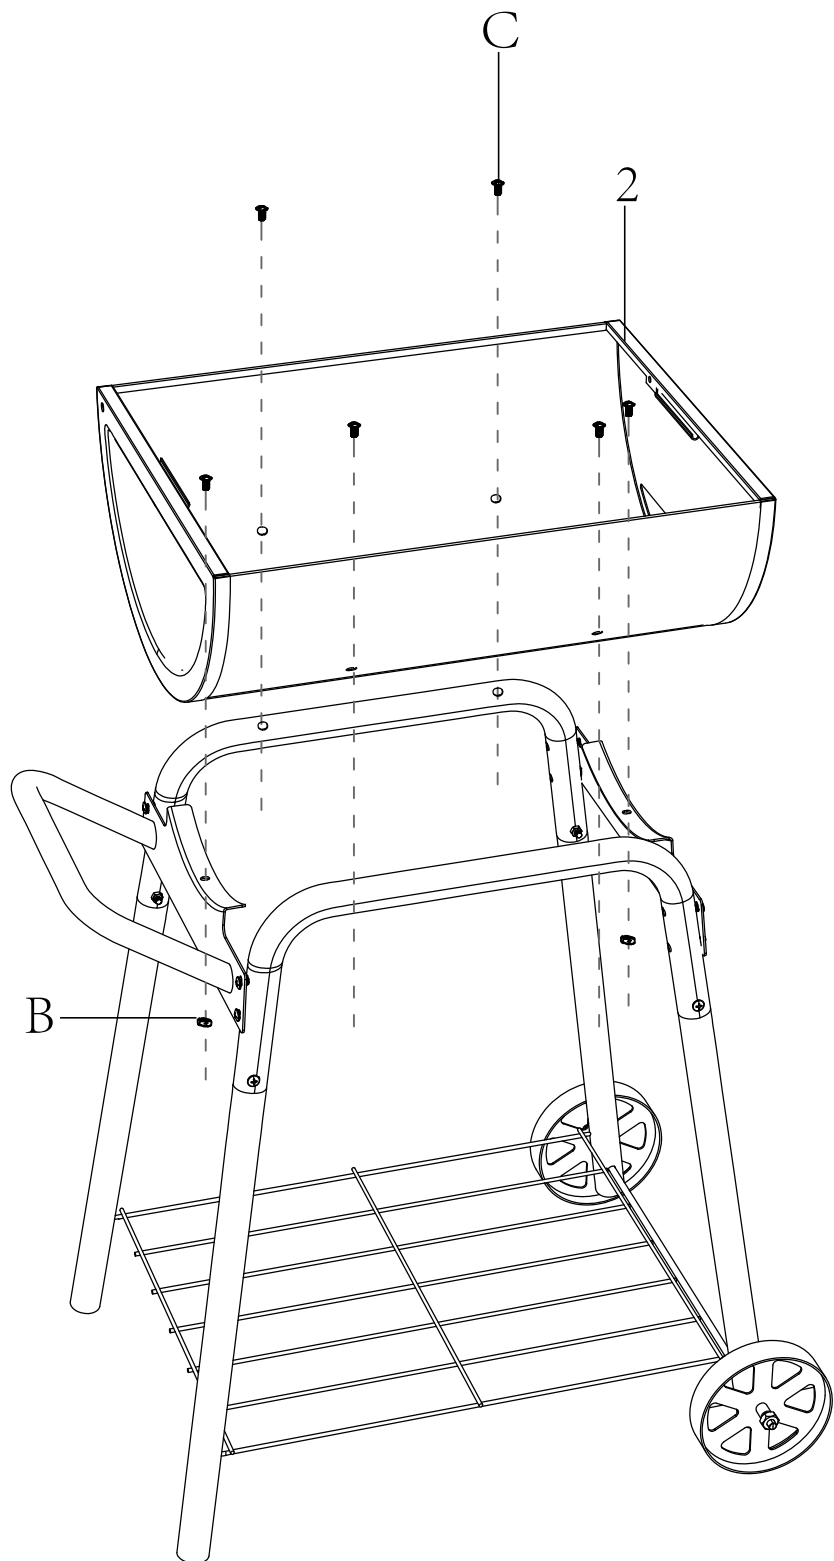


3	1x		B	2x
4	1x		C	4x
5	2x		D	4x
20	2x		E	2x
			F	2x

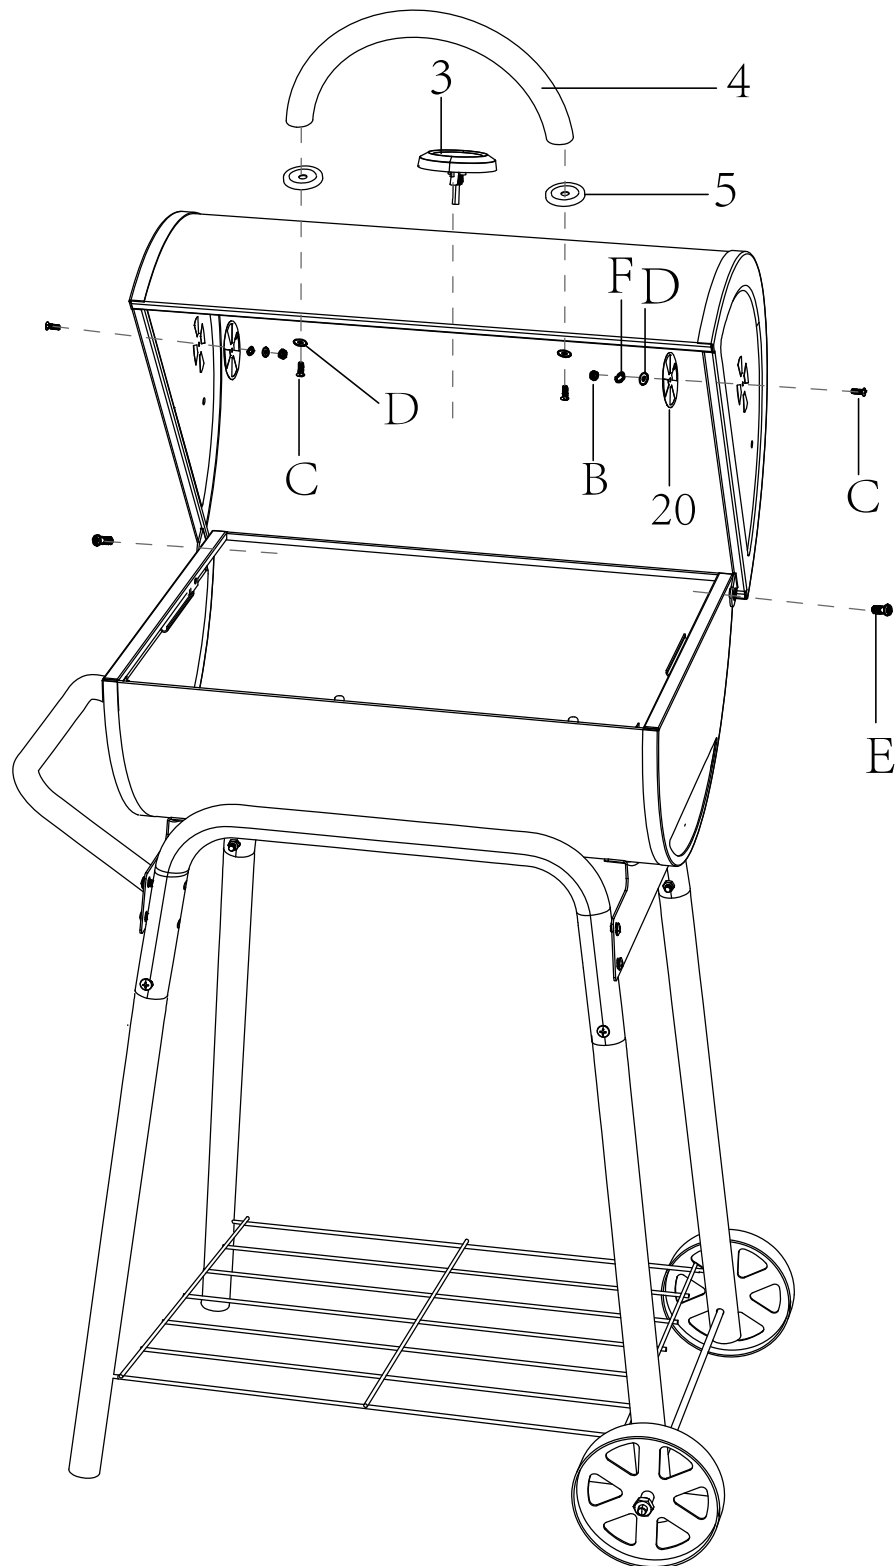

6	1x
---	----

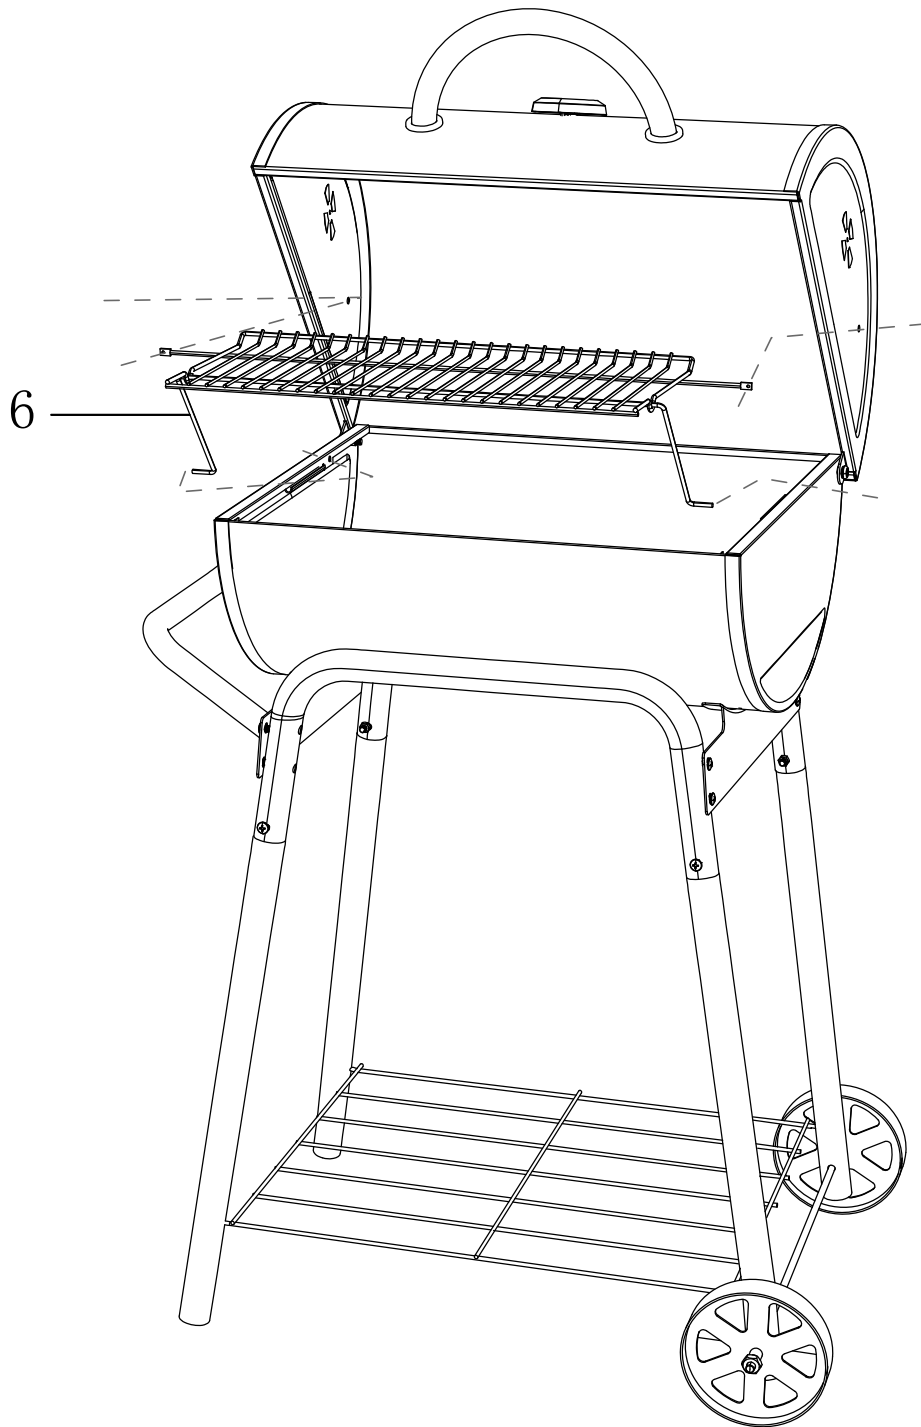

8	2x
9	1x
10	1x
19	1x
B	2x
C	2x

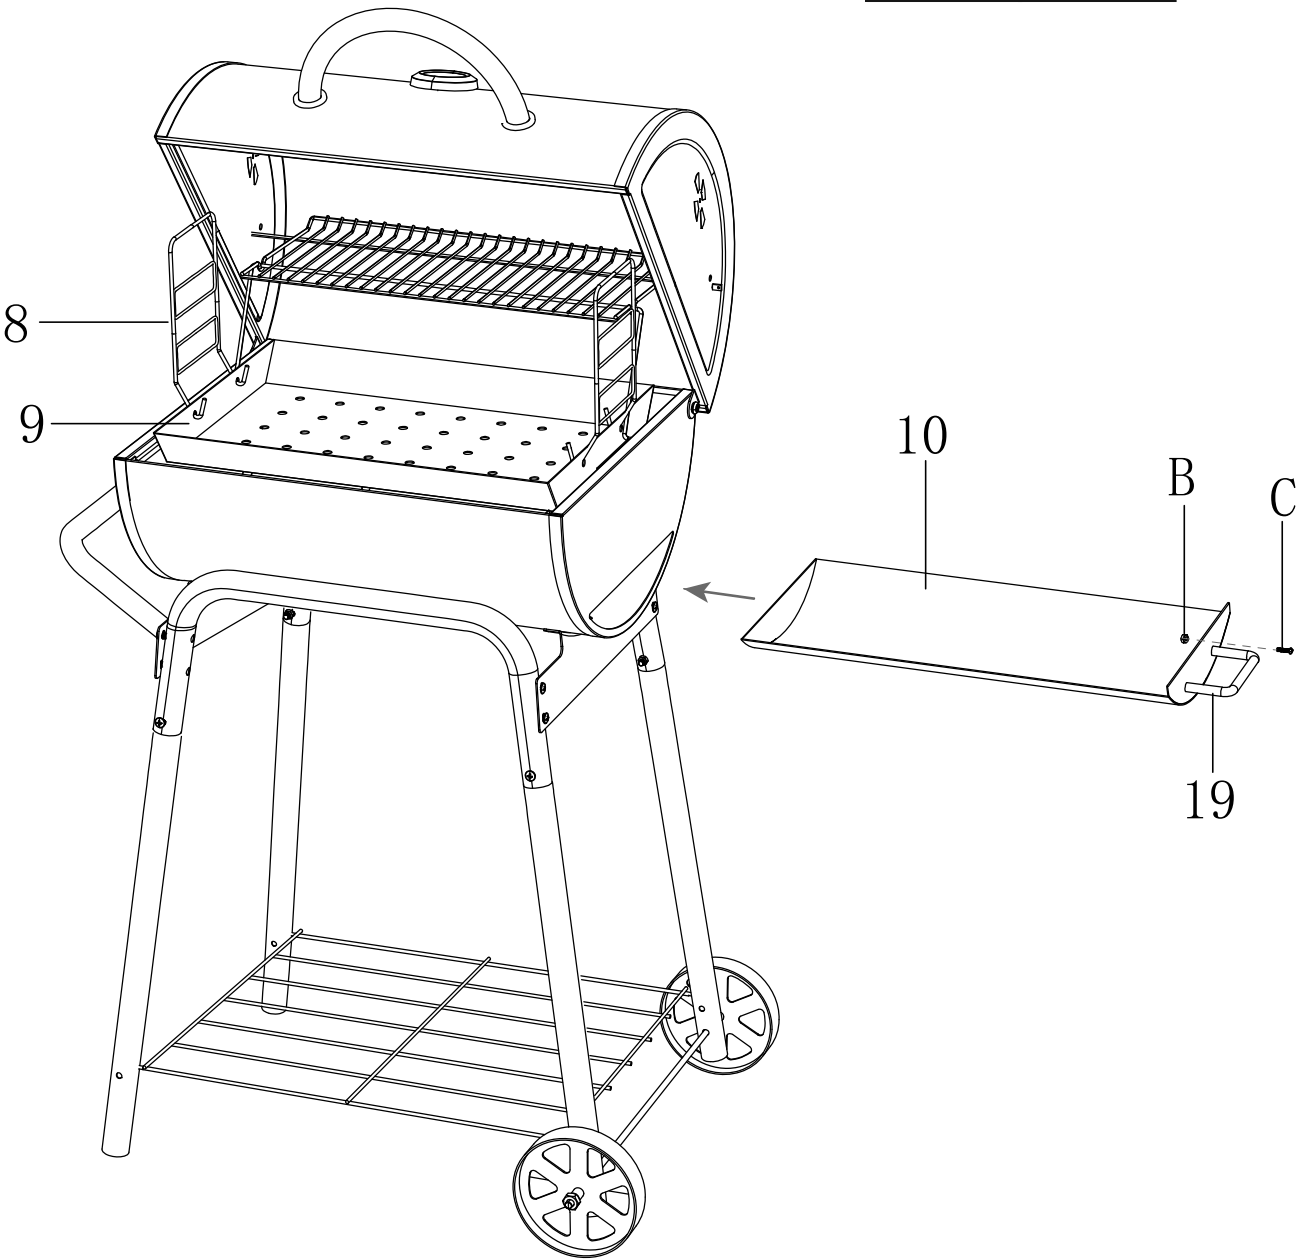

7	2x
---	----

