


AirGap Extend

20240910


Viktigt!

- Fästdon (mekanisk infästning) ska vara galvaniserad korrosionsskyddad klammer (140/10) alt pappspik minst 25 x 2,5 mm.
- För optimal lufttätet tejpas skarvarna i överlapp med Tätningstejp T-Flex.
- Förvaring och lagring ska alltid ske skyddat från nederbörd.
- Luftspaltsskivorna är fuktavstötande men nederbörd samt sämre väderomständigheter under och efter montage ska undvikas.

1.

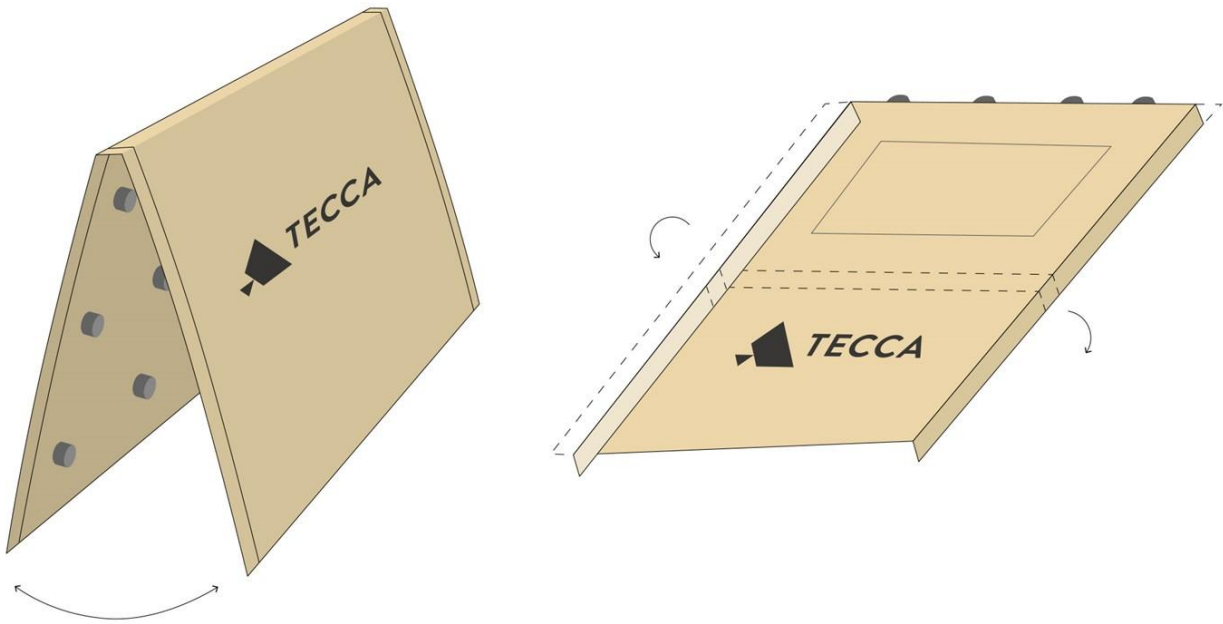

2.

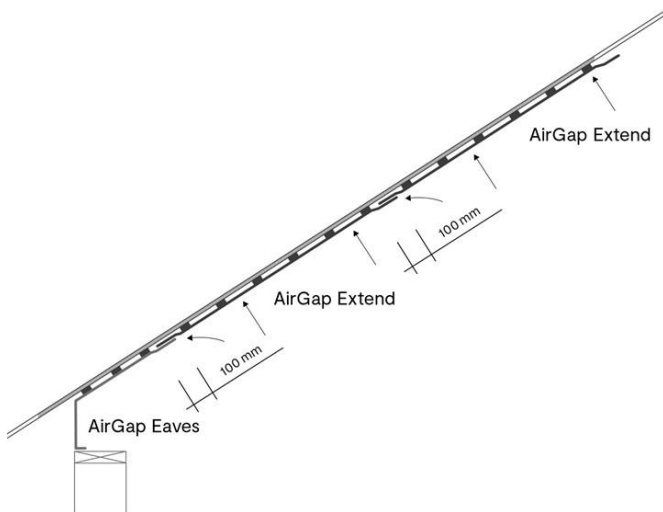


SE Montering av skivorna sker nedifrån och upp. Skjut in skivan enligt bild! Vid hängande underlagsduk avsluta distanserna vid dukens lägsta punkt.

NO Platene monteres nedenfra og opp. Skyv inn platen som vist på bildet. Hvis hengende underlagsduk brukes, avslutt avstandsstykkene ved dukens laveste punkt.

EN The boards are mounted from the bottom up. Insert the board as shown! In the case of a hanging underlayment, finish the spacing at the lowest point of the underlayment.

3.

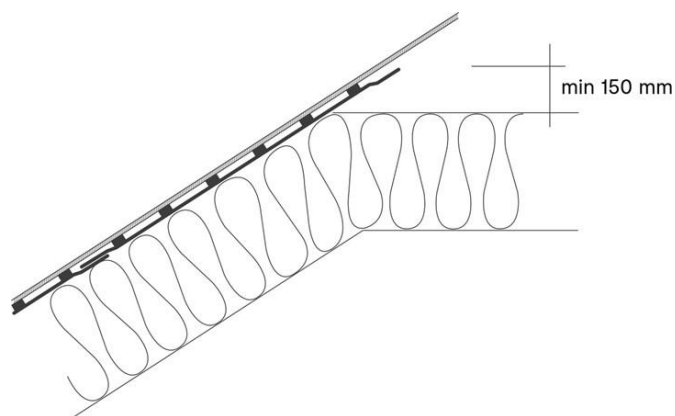

4.

SE Infästning (A): Korrosionsskyddad Rapid 140/10 (eller motsvarande) alternativt galvaniserad pappspik 25 x 2,5 mm. Skarvtejpning (B): Tätningstejp T-Flex. Fixering (C): För c1200 avsluta med skruvad tråkloss. (**OBS!** Skruven får ej gå igenom takunderlaget!) Klamra skivan mot klossen.

NO Festing (A): Korrosjonsbeskyttet Rapid 140/10 (eller tilsvarende) eller galvanisert pappspiker på 25 x 2,5 mm. Skjøteteip (B): Tetningsteip T-Flex. Fiksering (C): For c1200 avslutter du med en skrudd trekloss. (**OBS!** Skruen må ikke gå gjennom takunderlaget!) Klem fast platen mot klossen.

EN Mounting (A): Corrosion-resistant Rapid 140/10 (or equivalent) or 25 x 2.5 mm galvanised roofing nails. Splice taping (B): T-Flex sealing tape. Fixation (C): For c1200, finish with screwed wooden blocks. (**Note:** The screw must not penetrate the roof underlayment!) Tighten the board against the block.

